


SAM module removal

This is the SAM module, it is also the fuse box for the Fortwo:

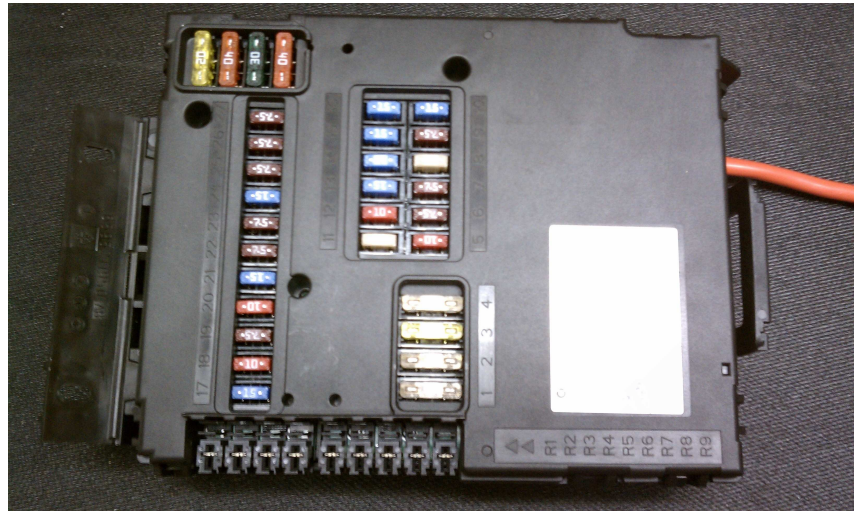

SAM Location: Left side, lower dash.



Pictured below is what you will see looking up from the driver side floorboard.

1) Disconnect the battery negative cable. The battery is found under the passenger floor board.


2) Remove any option fuse holders mounted at the “F” location. On the model pictured below, there are 3. Yours may have less or more.

3) Remove “1” and “2” screws. They are Torx #20 machine screws.



4) Then with the screws removed from the rear of the SAM, the front edge will unclip from the relay board at the “3” location pictured above.

5) From the top side of the SAM unplug the 11 connectors and then unbolt the large red cable pictured below. You will find the nut under a red plastic cover. It is a 10mm nut.

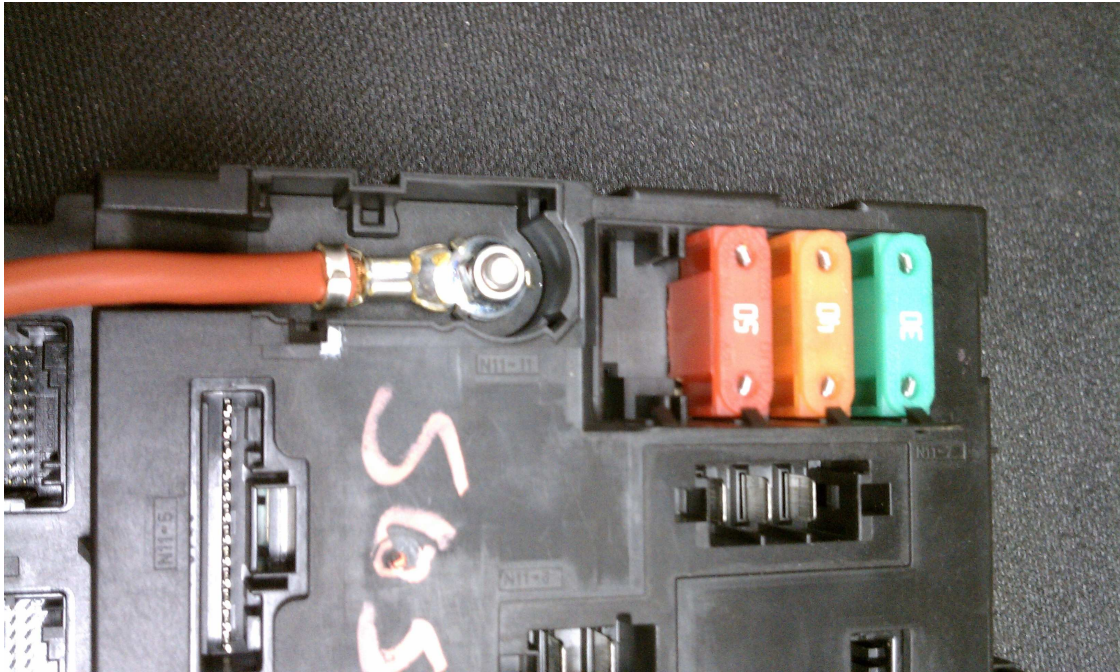

6) It is now ready for shipment. Leave the battery disconnected until the SAM is completely reinstalled.