


EZ Flasher

Chrysler SKREEM Liberty PIN Reading

1. The chip on the Jeep Liberty SKIM module is accessible by removing the cover of the module. Simply push in the four tabs with a small headed screwdriver to remove the cover and clip onto the chip closest to the microprocessor. Be sure the red dot on the clip is facing you with the antenna ring of the module on your right hand side as shown:

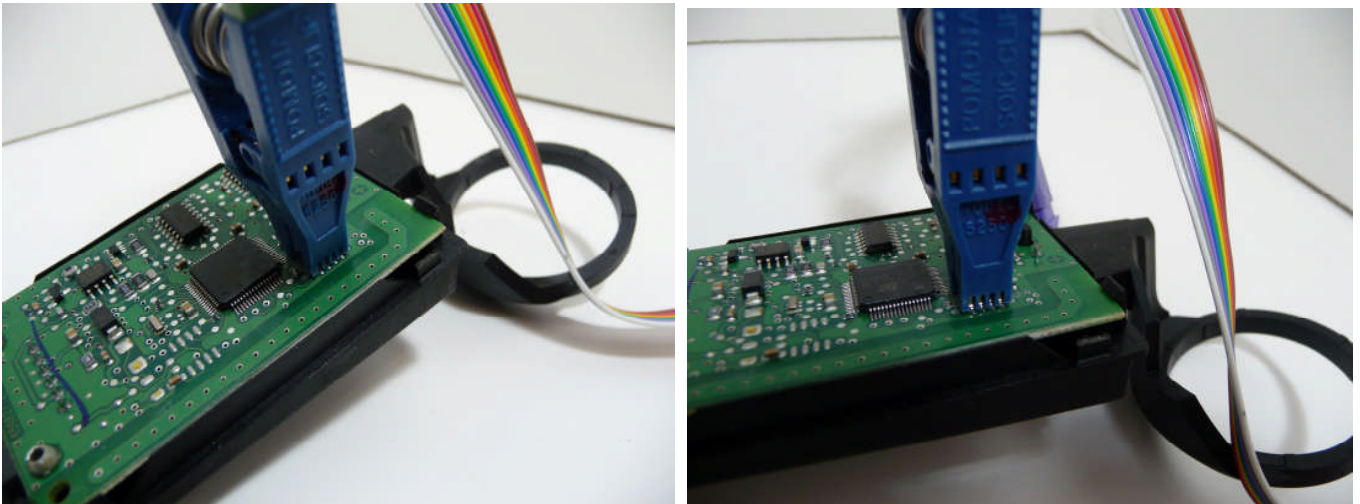

2. Attach Cable #4 to the EZ Flasher:



3. Turn on the EZ Flasher and press **NEXT**. Select **CHRYSLER**. (If the screen menu does not show Chrysler press **NEXT** to see the next screen menu)



4. Select **SKREEM**



5. Select **JEEP LIBERTY 05+**



6. Make sure Cable #4 is attached and the clip is secured to the chip with the red dot facing you on the clip and the chip turned the direction that you can read the chip number.



7. Press **NEXT**. If the chip is clean and the clip is attached correctly the following screen will read out the PIN code.



TROUBLESHOOTING

- A. If the chip isn't clean enough or the clip not attached correctly there will be one of two error screens. Simply adjust your clip or clean the chip again and press SELECT to try to read the PIN again.

